

# Wire Harness Selection Guide

## 9 Pin Connector

WH-0009-012 (12" leads w/QC) Use with model HXM remote 120V

WH-0009-112 (12" open leads) Use with model HXM remote 120V



WH-00010-012 (12" leads w/QC) Use with model HXM local 120V

WH-00010-112 (12" open leads) Use with model HXM local 120V



WH-00011-012 (12" leads w/QC) Use with model IXM remote 120VAC

WH-00011-112 (12" open leads) Use with model IXM remote 120VAC



WH-00012-012 (12" leads w/QC) Use with model IXM local 120VAC

WH-00012-112 (12" open leads) Use with model IXM local 120VAC



## 7 Pin Connector

WH-0007-012 (12" leads w/QC) Use with remote models IXM 24VAC & DXM 120VAC

WH-0007-112 (12" open leads) Use with remote models IXM 24VAC & DXM 120VAC



WH-0008-012 (12" leads w/QC) Use with local models IXM 24VAC & DXM 120VAC

WH-0008-112 (12" open leads) Use with local models IXM 24VAC & DXM 120VAC



## 6 Pin Connector

WH-0005-012 (12 inch leads w/QC) Use with model DXM remote sense 24VAC

WH-0005-112 (12 inch open leads) Use with model DXM remote sense 24VAC



WH-0006-012 (12 inch leads w/QC) Use with model DXM local sense 24VAC

WH-0005-112 (12 inch open leads) Use with model DXM local sense 24VAC



## Edge Card Connector

WH-0001-012 (12 inch leads w/QC) Use with model DXA remote sense 12VDC

WH-0001-112 (12 inch open leads) Use with model DXA remote sense 12VDC



WH-0002-012 (12 inch leads w/QC) Use with model DXA local sense 12VDC

WH-0002-112 (12 inch open leads) Use with model DXA local sense 12VDC



WH-0003-012 (12 inch leads w/QC) Use with model DXB remote sense 12VDC

WH-0003-112 (12 inch open leads) Use with model DXB remote sense 12VDC



WH-0004-012 (12 inch leads w/QC) Use with model DXB local sense 12VDC

WH-0004-112 (12 inch open leads) Use with model DXB local sense 12VDC

